


# Instructions for use of tool

## Instructions for use of tools No. 740-054, 740-052 and 740-027

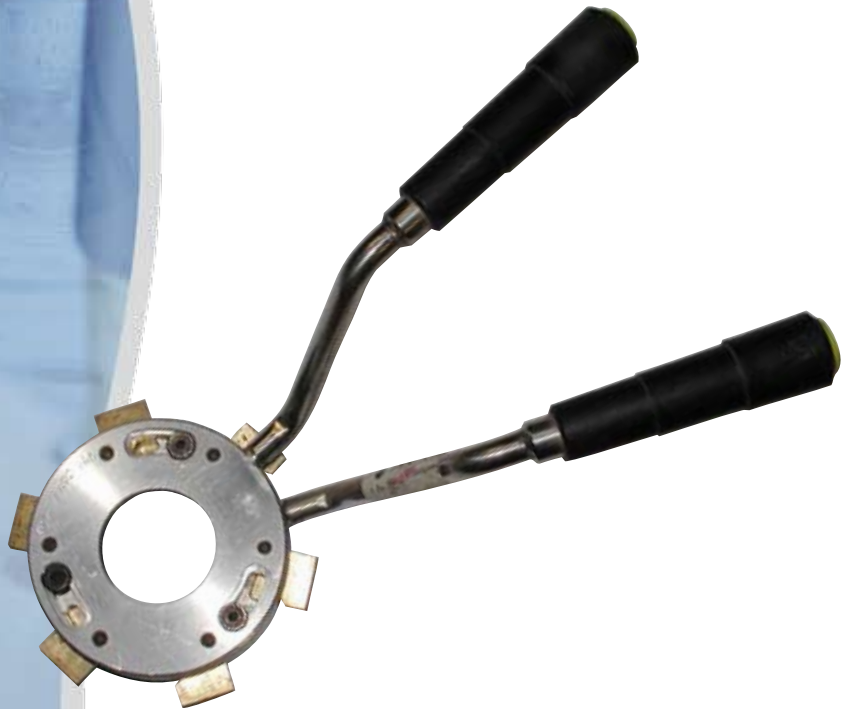

740-054, 740-052 and 740-027 11-06-2008

# 740-054, 740-052 & 740-027

Fig. 1



Use tool for extractor tube as specified below:

Type:	Tool:
RS-LS	740-054
RS-LP	740-052
RS-LC	740-027

Fig. 2



Mount the tool on the extractor tube. Press the handles together and maintain pressure as you turn the tool counter-clockwise until the lugs on the tool click into the slots in the upper part of the extractor tube.

Fig. 3



Keep the handles together, as you continue turning the tool counter-clockwise until the upper part of the extractor tube is free from the threads in the neck.

Fig. 4



The extractor tube can now be removed from the keg.