

## Waiter control sales:



FUNKSJONSPARAMETER  
SERVKONT. JA

Choose function with the Plus-button.  
Possibility of 1 to 10 waitresses.

## Reset:

FUNKSJONSPARAMETER  
RESET

This function resets the dispenser  
to the default values.  
Activate the function by pressing the PLUS button.

*NOTE! This function reset no pulses or password*

## Technical data:

- 7 lines, 2 or 3 measures.
- Sales result for every line separately.
- Daily and periodically sales results for every line separately
- Portioning or free flow measuring
- Ability to waitress control (10 waitresses)
- Password function
- Choose of valve
- Power reduction on valves
- Printer connection

- Display panel (W,L,H) 220x48x40 mm
- Centralenhet (W,L,H) 160x165x53 mm
- Power supply: 24 VAC 60 VA with Sirai valves

## Upgrading software:

Before upgrading the software version, the manufacturer should always be consulted.


## Manufacturer:

WWB DRINK SYSTEM AB  
Smedsbyvägen 212  
65610 KORSHOLM  
FINLAND

Tfn. +358-6-3223 074

info@wwbdrinksystem.fi  
www.wwbdrinksystem.fi

# BCS-71/STANDARD SERVICE MANUAL REV 3.6 N

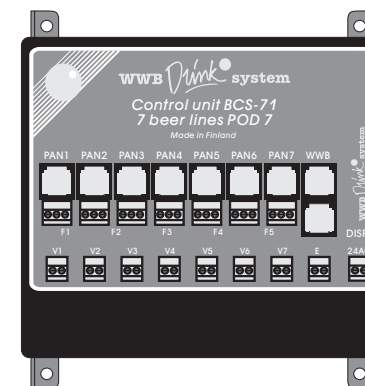

**WWB**  
DRINK SYSTEM



14.03.2017

## Electronic serial number and software version:

CLR → BCS-71N D3.X P3.X  
SERIENUMMER: 2XXXXX

Push the CLR-button to view the dispenser's serial number and software version.

## Service:

ENT → SERVICE

Choose the service function by inserting the yellow service key in the keyhole.

↓

→ + "SERVICE PÅGÅR is shown on the display. The text starts flashing if the service key is removed."

→ - Remove the service key and push the CLR-button to erase the text from the display.

## Cleaning:

ENT → RENS  
VELG LINJE

↓

Choose line by pushing its measure button. Close the line by pushing the same button once again or by pushing the CLR-button. This function is used to open the valves when rinsing the draft beer system. No portions are counted while rinsing the system by using the cleaning function.

## Measure programming:

ENT → MEASURE SETUP 00000  
Choose line

↓

CLR → MEASURE SETUP 00000  
COPYING line

Choose line and portion for which the measure should be changed. You can change the number of pulses by pushing the PLUS-, MINUS- or the CLR-button. A sample of the chosen measure is obtained by pushing the same button once again. The measure can be cleared by pushing the CLR-button. To set a new measure press and hold down the portioning button until the correct measure is obtained. Stop the flow by releasing the button. Adjust the pulses with PLUS and MINUS and confirm with ENT.

+ → MEASURE BROWSING  
Line 1 Key 1 00080

Copy the measures from line 1 to all other lines by pressing the CLR-button.

The adjusted measures can be checked on the display. To change them, use PLUS-, MINUS- and CLR-buttons. Use the arrow keys to browse forwards and backwards.

## Programming of sales results:

ENT → LINJE 1 2 3 4 5 6 7  
GRUPPE A B C D E F G

↓

Product lines with the same letter are counted together in the sales results. Line 1 is always A and can not be changed. The PLUS-button changes the letter. The MINUS-button moves the cursor.

NOTE! SOME OF THE MENUS MIGHT BE HIDDEN DEPENDING ON THE CHOSEN FUNCTION.

## Valve protection:

ENT → FUNKSJONSPARAMETER  
VENT. BESKYTT 00020

↓

This function close the valve if no flow is detected after set time. Time is given in seconds  
+ change the figure  
- moves the cursor

## Selection of valve type:

ENT → FUNKSJONSPARAMETER  
ODL VENTIL L1 NEI

↓

Choose function by pressing the PLUS-button. You can choose ODL or Sirai valve. Be carefully when choosing valve type so it's correct. Nei=Sirai Valve  
*Note! Max 4 ODL-valves can be open at the same time.*

## Dispensing on time base:

ENT → FUNKSJONSPARAMETER  
PORS. PÅ TID NEI

↓

Choose function by pressing the PLUS-button. After JA is selected, The select line is portioned on time base (L1-L7).

## Password:

ENT → FUNKSJONSPARAMETER  
PASSORD JA

↓

Choose function by pressing the PLUS-button. YES = Dispenser activation by password  
NO = Dispenser activation by electronic keys

The password is always the combination:  
PLUS, MINUS, ENT

*Note! Password and waiter control cannot be used at the same time.*

## Volume measuring:

ENT → FUNKSJONSPARAMETER  
VOLUMMETER NEI

↓

Choose function with the Plus-button. Browse through the different lines by pushing the ENT-button and choosing JA or Nei with the PLUS-button. Portioning and free flow measuring can be used at the same time on different lines. The measuring unit for the volume measuring is large measure for the line in question.

## Display panel in sales mode:

ENT → FUNKSJONSPARAMETER  
SIDEPANEL L1/2 JA

↓

Choose function with the Plus-button. Ja=Display panel is in use in the sale mode  
Nej=Display panel is not in use in the sale mode

## 3 button secondary panel:

ENT → FUNKSJONSPARAMETER  
PANEL 3 MENGDE NEI

↓

Choose function with the Plus-button. Ja = secondary panels with 3 buttons in use.  
Nej = secondary panels with 2 buttons in use.