


OPERATING INSTRUCTIONS

GAS CHANGE OVER UNIT

Step 1


Connect gas cylinders to the inlets. The bottle you open first will be locked in as the active cylinder, this will be indicated by the "Cylinder in use indicator"

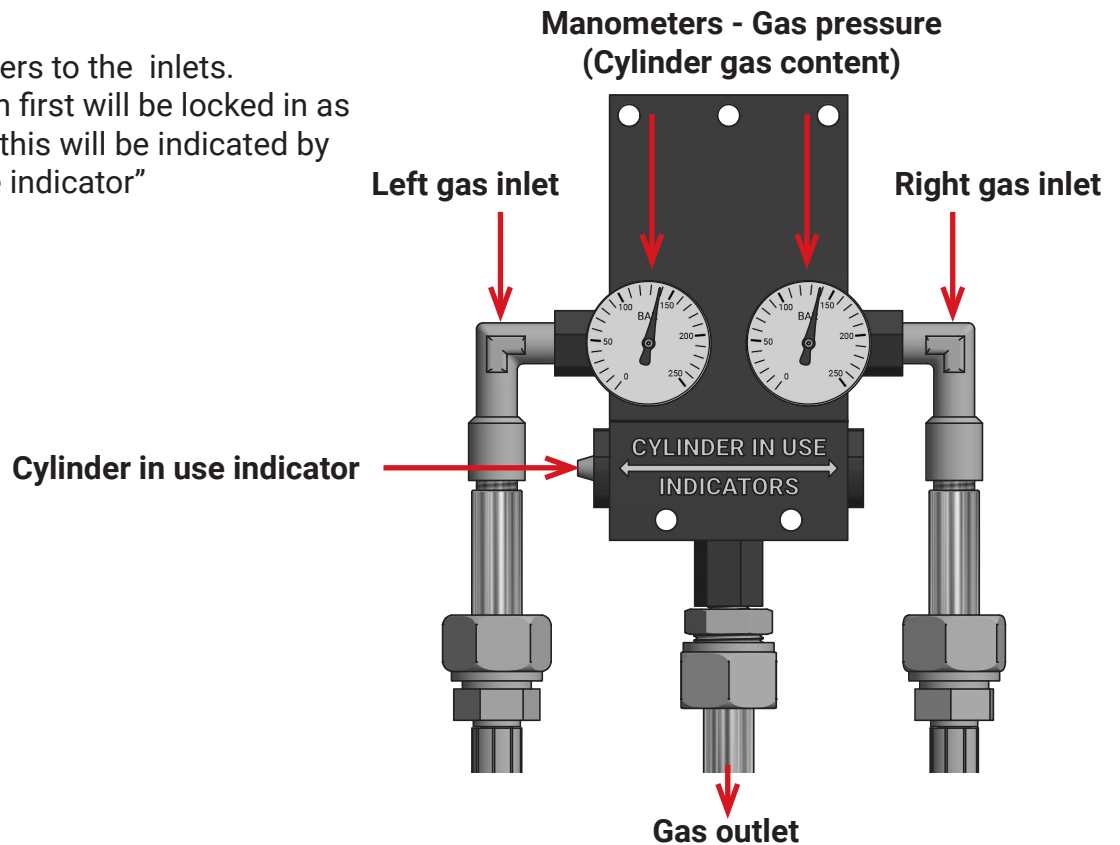

Step 2

The unit will automatically switch over to the second cylinder when the pressure in the first drops to approx. 13 Bar. This will be indicated by that the "Cylinder in use indicator" change to the other side.

Replace the empty cylinder and turn it on.

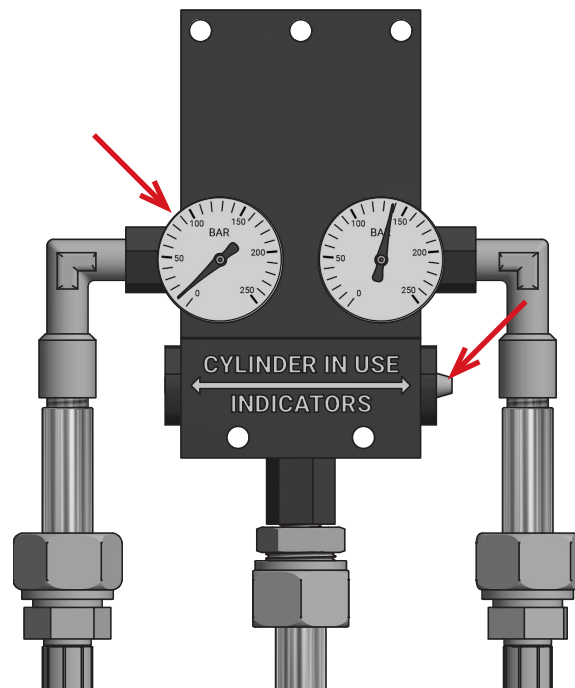

MANUAL SWITCHING

Turn off the cylinder you want to take out of service.

Bleed off the pressure on that side by slowly loosening the cylinder connector and the unit will switch to the other side. (Never try to manually switch side by pushing the indicator)